


Full lift safety valve with spring loading.(AIT)

Model 486



ASME

Catalogue available in International System Units (SI) in PDF format.

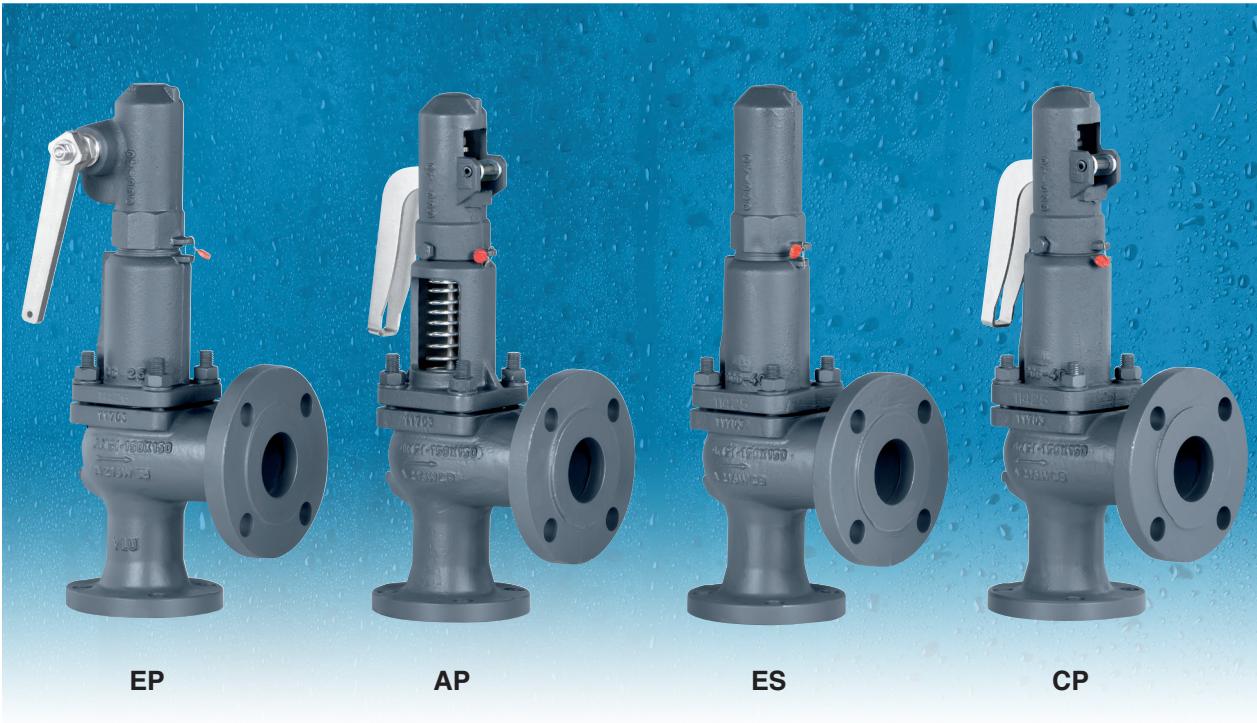

The valve works as an automatic pressure releasing regulator activated by the static pressure existing at the entrance to the valve and is characterized by its ability to open instantly and totally.

Design in accordance with "ASME code section VIII".

Materials according ASME code section II and ASTM. Connections according ASME/ANSI B16.5-2009 standard. Center to face dimensions according API-526.

In accordance with the requirements of the pressure equipment directive 2014/68/EU.

EC valve verification certified by: TÜV Rheinland Industrie Service GmbH, Notified Body for Pressure Equipment ID-No. 0035

Type (Module B) EC nº DEP-B-prod.001072-22 certified by: TÜV Rheinland Ibérica ICT, S.A.

In compliance with the ATEX 2014/34/EU directive "Protective equipment and systems for use in potentially explosive atmospheres".

Other authorisations: ISCIR, ITI, NASTHOL,EAC,...etc.

Specifications

- 90° angular flow.
- Activated by direct action helicoid spring.
- Simplicity of construction ensuring minimum maintenance.
- Materials carefully selected for their resistance to corrosion. With the exception of washers and couplings, the valves are free of non-ferric materials.
- Internal body designed to offer favourable flow profile.
- Sealing surfaces treated and balanced, making them extremely tightness, even exceeding API-527 requirements.
- Great discharge capacity. For liquids typically used with openings similar to proportional safety valves.
- Equipped with draining screws for removing condensation.
- Auto-centering plug.
- Threaded shaft with lever positioner facilitating immediate manual action.
- Elevator, independent of the seal, designed facilitate sudden opening when the steam expands and, with any fluid, guarantees absolute opening and closing precision.
- All the valves are supplied sealed at the set pressure requested, simulating operational conditions, and are vigorously tested.
- All components are numbered, registered and checked. If requested in advance, material, casting, test and efficiency certificates will be enclosed with the valve, and the instruction manual, in accordance with P.E.D. 2014/68/EU.

IMPORTANT

Depending on demand:

- 1.- Blocking screw which facilitates hydrostatic testing of the container which to be protected.
- 2.- Rapid limiter to reduce the coefficient of discharge.
- 3.- Fluorelastomer (Viton) seals, Silicone's rubber, PTFE (Teflón)... etc., achieving leakage levels less than:

$$0,2 \times 10^{-8} \text{ psi pulg.}^3 \text{ seg.}$$

The ranges of application allow certain flexibility although we recommend limiting them to:

FLUID	RANGE OF APPLICATION FOR THE SEALS					
	SET PRESSURE [psi]					
	2,90	26,11	58,02	69,62	101,53	435,11 580,15
Saturated steam	S	V		T		
Liquids and gases	S		V		T	
SEALS	TEMPERATURE [°F]					
	ACCORDING TO MANUFACTURERS		RECOMMENDED BY VYC			
	MINIMUM	MAXIMUM	MINIMUM	MAXIMUM		
Silicone's rubber	S	-76	+392	-58	+239	
Fluorelastomer (Viton)	V	-40	+482	-22	+302	
PTFE (Teflón)	T	-445	+500	-112	+446 (1)	

(1) For temperatures exceeding 446 °F apply metallic seal only

- 4.- Fluorelastomer (Viton) membrane and O-ring isolating the rotating or sliding parts from the working fluid.

- 5.- Electrical contact indicating open/closed.







- 6.- Balance bellows to:

- Protect the spring from atmospheric influences.
- Ensure outside of valve body is totally tightness.
- Level out external or self-generated back pressure.

- 7.- Possibility of manufacture in other types of material, for special operating conditions (high temperatures, fluids, etc.).

- 8.- Totally free of oil and grease, to work with oxygen, avoiding possible fire risks (UV-Oxygen-VBG 62).

- 9.- Special springs for critical temperatures.

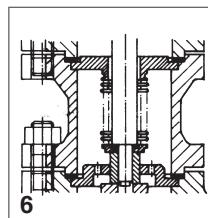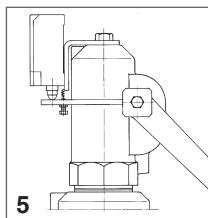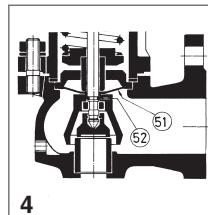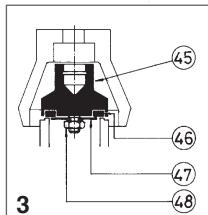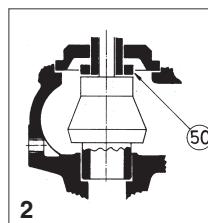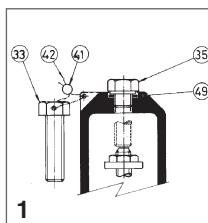

Nº. PIECE	PIECE	MATERIAL											
		CAST STEEL						STAINLESS STEEL					
1	Body	Cast steel (ASTM A216 - WCB)											
2	Closed bell	Nodular iron (ASTM A536 65 - 45 - 12)											
3	Open bell	Cast steel (ASTM A 216 - WCB)											
4, 5, 6	Hood	Nodular iron (ASTM A 536 65 - 45 - 12)											
7	Elevator	Nodular iron (ASTM A 536 65 - 45 - 12) (1)											
8	Cam	Carbon steel (ASTM A 570 - 36) (6)											
9, 10	Lever	Carbon steel (ASTM A 570 - 36)											
11	Seating	Stainless steel (AISI 420)											
12	Plug	Stainless steel (AISI 420)											
13	Lead	Stainless steel (AISI 420) (4)											
14	Spring press	Carbon steel (AISI 1045)											
15	Separator	Stainless steel (AISI 420)											
16	Rod	Stainless steel (AISI 420)											
17	Lever shaft	Carbon steel (AISI 1045)											
18	Gudgeon	Carbon steel (AISI 1070)											
19	Ring	Stainless steel (AISI 420)											
20, 21	Safety ring	Stainless steel (AISI 301)											
22	Spring	Vanadium chrome steel (AISI 6150 (2))											
23	Gland	Carbon steel (AISI 1045)											
24	Hollow screw	Stainless steel (AISI 303)											
25	Hollow screw nut	Stainless steel (AISI 303)											
26	Buffer nut	Stainless steel (AISI 303)											
27	Rod check nut	Carbon steel (AISI 1015)											
28, 29, 48	Nut	Carbon steel (AISI 1015)											
30, 31	Washer	Carbon steel (AISI 1015)											
32	Stud	Carbon steel (AISI 1035)											
33, 34, 35	Screw	Carbon steel (AISI 1045)											
36	Cap	Carbon steel (AISI 1035)											
38	Coupling	Graphite											
39	Coupling	PTFE (Teflon)											
40	Seal	Graphite											
41	Seal	Plastic											
42	Sealing wire	Sealing wire											
43	Characteristic plate	Stainless steel (AISI 304)											
45	Plug	Stainless steel (AISI 316)											
46	Sealing disk	PTFE (Teflon)											
		Silicone's rubber											
		Fluorelastomer (Viton)											
47	Washer	Stainless steel (AISI 316)											
49	Coupling	Copper											
50	Limiter	Stainless steel (AISI 420)											
51	Membrane	Fluorelastomer (Viton)											
52	O-ring	Fluorelastomer (Viton)											
NPS ₁ x NPS ₂		1"x2" to 8"x10"											
Class		150 lbs						150 lbs					
OPERATING CONDITIONS	PRESSURE [psi]	245,11	200,15	175,50	147,94	121,83	94,27	66,72	226,84	198,70	147,94	66,72	
	MAX. TEMP. [°F]	248	392	482	572	662	752	800	248	392	572	752	
	MIN. TEMP. [°F]				-20,2								
Class		300 lbs						300 lbs					
OPERATING CONDITIONS	PRESSURE [psi]	580,15	580,15	580,15	577,25	545,34	503,28	333,59	590,59	517,79	458,32	417,70	
	MAX. TEMP. [°F]	248	392	482	572	662	752	800	248	392	572	752	
	MIN. TEMP. [°F]				-20,2								

(1) 1"x2" in stainless steel (ASTM A351 CFM).
(2) Spring steel (ASTM A228) for wire spring Ø < 0.4 in. Maximum temperature EP, ES and CP 482 °F / AP 752 °F.


(3) Vanadium chrome steel (AISI 6150) for wire spring Ø > 0.4 in.

(4) 8" x 10" in Stainless steel (ASTM A743 CA40F).


(5) 1" x 2" in Stainless steel (ASTM A351 CF8M).

(6) 1" x 2" in Stainless steel (AISI 304).


(7) 1 1/2" x 2" to 4" x 6" L in Stainless steel (AISI 316).

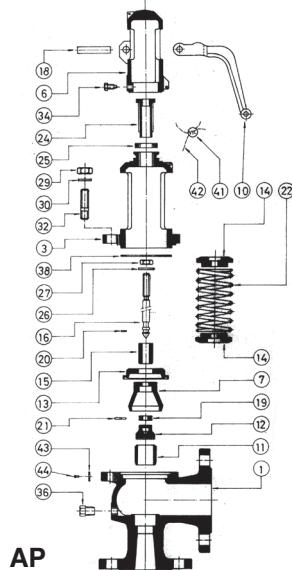


AP

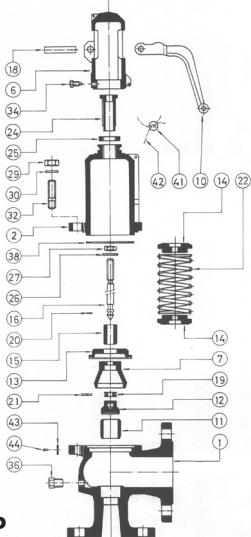

CP

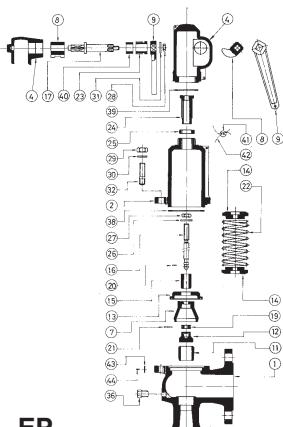

EP

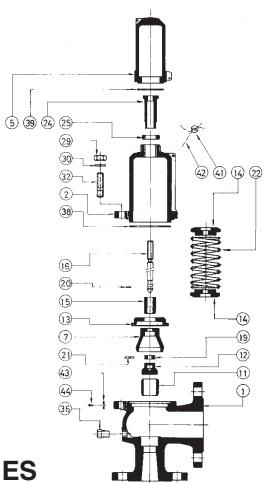

ES

Full lift safety valve with spring loading (AIT) model 486 - AP and CP.

1. Disassembly and assembly.

1.1 Disassembly.

To replace the spring (22) or clean any of the internal components of the valve, proceed in the following manner:

A - Withdraw the clip (18), using a punching tool, until the lever (10) comes free.

B - Loosen the screws (34) and take the cap (6) off.

C - Holding the spindle (16) steady, loosen the hollow screw nut (25) and the hollow screw (24) until you note a realeasing of the spring (22).

D - Mark on the spindle (16) the position of the spindle lock-nut (27) and the adjusting nut (26). Loosen them and remove them.

E - Unscrew the nuts (29) and remove them, together with the studs (32) and their washers (30).

F - Lift the cover (3) or (2) and you will have access to all of the components.

1.2 Assembly.

A - Place the safety-ring (20) on the spindle (16) and press it against the gasket (12).

B - In the spindle channel (16) connect the ring (19) and fix it to the security-ring (21). Introduce the elevator (7) into the upper part of the spindle (16) and press this against the previously described pieces.

C - Enter the guide (13), the separator (15), the spring-press (14), the spring (22), the spring-press (14) through the upper part of the spindle (16) and press this against the previously described pieces.

D - Replace the assembly (38) and the cover (3) or (2).

E - Place the washers (30) on the studs (32) and make up the nuts (29) diagonally, checking the correct alignment of the cover (3) or (2).

F - Adjust the firing pressure with the hollow screw (24) and fix the adjustment position with the hollow screw nut (25).

G - Turn the spindle lock-nut (27) and the adjusting nut (26) to the position mrked (see 1.1.D) and make up against each other.

H - Introduce the cap (6) and tighten the screws (34).

I - Place the lever (10) and fix it with the fastener (18).

2. Adjusting the firing pressure.

A - Proceed according to points 1.1.A, 1.1.B, 1.1.C.

B - Proceed according to points 1.2.F, 1.2.H, 1.2.I.

Full lift safety valve with spring loading (AIT) model 486 - EP.

1. Disassembly and assembly.

1.1 Disassembly.

To replace the spring (22), or clean any of the internal components of the valve, proceed in the following manner:

A - Move the lever (9) in direction C as far as the constructive catcher.

B - Unscrew the cap (4) and remove.

C - Holding the spindle (16) steady, loosen the hollow screw nut (25) and the hollow screw (24) until you note a realeasing of the spring (22).

D - Mark on the spindle (16) the position of the spindle lock-nut (27) and the adjusting nut (26). Loosen them and remove them.

E - Unscrew the nuts (29) and remove them, together with the studs (32) and their washers (30).

F - Lift the cover (2) and you will have access to all of the components.

1.2 Assembly.

A - Place the safety-ring (20) on the spindle (16) and press it against the gasket (12).

B - In the spindle channel (16) connect the ring (19) and fix it to the security-ring (21). Introduce the elevator (7) into the upper part of the spindle (16) and press this against the previously described pieces.

C - Enter the guide (13), the separator (15), the spring-press (14), the spring (22), the spring-press (14) through the upper part of the spindle (16) in a correlative manner.

D - Replace the assembly (38) and the cover (2).

E - Place the washers (30) on the studs (32) and make up the nuts (29) diagonally, checking the correct alignment of the cover (2).

F - Adjust the firing pressure with the hollow screw (24) and fix the adjustment position with the hollow screw nut (25).

G - Turn the spindle lock-nut (27) and the adjusting nut (26) to the position marked (see 1.1.D) and make up against each other.

H - Change the coupling (39) and lightly tighten the cap (4). Move the lever (9) towards position A as far as the constructive catcher. Definitely tighten the cap (4).

2. Adjustig the firing pressure.

A - Proceed according to points 1.1.A, 1.1.B, 1.1.C.

B - Proceed according to points 1.2.F, 1.2.H.

Full lift safety valve with spring loading (AIT) model 486 - ES.

1. Disassembly and assembly.

1.1 Disassembly.

To replace the spring (22), or clean any of the internal components of the valve, proceded in the following manner:

A - Unscrew the cap (5) and remove.

B - Holding the spindle (16) steady, loosen the hollow screw nut (25) and the hollow screw (24) until you note a realeasing of the spring (22).

C - Unscrew the nuts (29) and remove them, together with the studs (32) and their washers (30).

F - Lift the cover (2) and you will have access to all of the components.

1.2 Assembly.

A - Place the safety-ring (20) on the spindle (16) and press it against the gasket (12).

B - In the spindle channel (16) connect the ring (19) and fix it to the security-ring (21).

Introduce the elevator (7) into the upper part of the spindle (16) and press this against the previously described pieces.

C - Enter the guide (13), the separator (15), the spring-press (14), the spring (22), the spring-press (14) through the upper part of the spindle (16) in a correlative manner.

D - Replace the washers (38) and the cover (2).

E - Place the washers (30) on the studs (32) and make up the nuts (29) diagonally, checking the correct alignment of the cover (2).

F - Adjust the firing pressure with the hollow screw (24) and fix the adjustment position with the hollow screw nut (25).


G - Change the coupling (39) and tighten the cap (5).

2. Adjusting the firing pressure.

A - Proceed according to points 1.1.A, 1.1.B.

B - Proceed according to points 1.2.F, 1.2.G.

NPS1 x NPS2	1"x 2"	1 1/2"x 2"	1 1/2"x2 1/2"	1 1/2"x3"(2"x3")*	2"x3"(3"x4")*	3"x4"(4"x6")*	4" x 6"	4" x 6"	6" x 8"	8" x 10"
API Orifice Letter	D - E	F	G	H	J	L	N	P	Q	T
do	0,63	0,79	0,98	1,26	1,57	1,97	2,48	3,03	4,33	6,10
$Ao = \frac{\pi \cdot do^2}{4}$	0,31	0,49	0,76	1,25	1,95	3,04	4,83	7,22	14,73	29,25
H	14,45	16,22	17,17	19,61	21,46	26,18	29,33	31,89	42,13	47,24
h ₁	4,41	5,08	5,08	5,83	5,83	7,52	7,52	7,52	9,72	13,03
L ₁	4 1/2	4 3/4 (6)*	4 3/4 (6)*	4 7/8	4 7/8 (7 1/8)*	6 1/2 (7 1/8)*	8 1/4	9 (10)*	9 1/2	11
L ₂	4 1/8	4 7/8	4 7/8	5 1/8	5 3/8 (7 1/4)*	6 1/8 (7 1/16)*	7 3/4	7 1/8 (8 7/8)*	9 7/16	10 7/8
R	1/4"	1/4"	1/4"	1/4"	1/4"	3/8"	3/8"	3/8"	3/8"	3/8"
Whitworth gas-tight cylindrical female thread ISO 228/1 (DIN-259)										
CODE	STAINLESS STEEL 2002-486.	CAST STEEL 2002-486.	WEIGHT [lb]	INTAKE FLANGE Class 150 lbs ASME/ANSI B16.5	ESCAPE FLANGE Class 300 lbs ASME/ANSI B16.5	INTAKE FLANGE Class 150 lbs ASME/ANSI B16.5	ESCAPE FLANGE Class 300 lbs ASME/ANSI B16.5	INTAKE FLANGE Class 150 lbs ASME/ANSI B16.5	ESCAPE FLANGE Class 300 lbs ASME/ANSI B16.5	INTAKE FLANGE Class 150 lbs ASME/ANSI B16.5
D ₁	4,25	5	5	5	6	7,50	9	9	11	13,5
K ₁	3,12	3,88	3,88	3,88	4,75	6	7,50	7,50	9,50	11,75
I ₁	5/8	5/8	5/8	5/8	3/4	3/4	3/4	3/4	3/4	7/8
b ₁	0,56	0,68	0,68	0,68	0,75	0,94	0,94	0,94	1	1,12
DRILLS N. ^o	4	4	4	4	4	4	8	8	8	8
D ₁	4,88	6,12	6,12	6,50	8,25	10	10	10	12,5	15
K ₁	3,50	4,50	4,50	5	6,62	7,88	7,88	7,88	10,62	13
I ₁	3/4	7/8	7/8	3/4	7/8	7/8	7/8	7/8	7/8	1
b ₁	0,68	0,81	0,81	0,87	1,12	1,25	1,25	1,25	1,44	1,62
DRILLS N. ^o	4	4	4	8	8	8	8	8	12	12
D ₂	6	6	7	7,50	7,50 (9)	9 (11)	11	11	13,5	16
K ₂	4,75	4,75	5,50	6	6 (7,50)	7,50 (9,50)	9,50	9,50	11,75	14,25
I ₂	3/4	3/4	3/4	3/4	3/4 (3/4)	3/4 (7/8)	7/8	7/8	7/8	1
b ₂	0,75	0,75	0,87	0,94	0,94 (0,94)	0,94 (1)	1	1	1,12	1,18
DRILLS N. ^o	4	4	4	4	4 (8)	8 (8)	8	8	12	12
MODEL	EP	AP	ES	CP	EP	AP	ES	CP	EP	CP
CAST STEEL 2002-486.	150 lb	300 lb	150 lb	150 lb	150 lb	150 lb	150 lb	150 lb	150 lb	150 lb

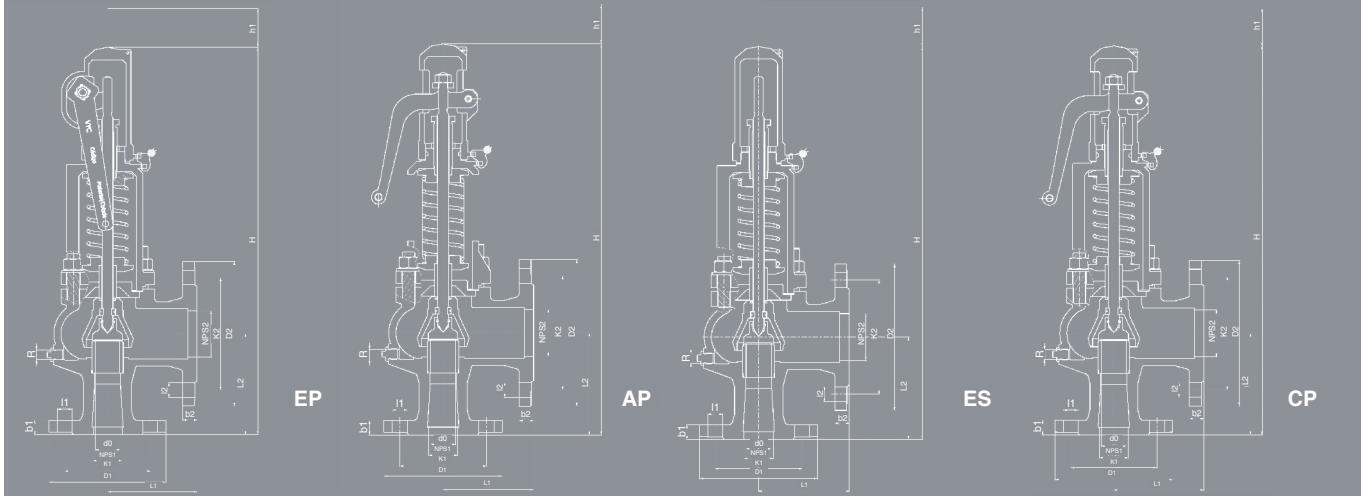

RECOMMENDED RANGES OF APPLICATION

FLUID		MODEL		EP	AP(1)	ES	CP(1)
		SATURATED STEAM	GASES	*	*	*	*
		LIQUIDS		*		*	
INTERNAL OR GENERATED	SATURATED STEAM GASES			15			
EXTERNAL VARIABLE (1)	LIQUIDS			—			
EXTERNAL CONSTANT (1)(2)(3)	SATURATED STEAM GASES			5			
	LIQUIDS			—			
	SATURATED STEAM GASES			50			
	LIQUIDS			90			
% OVERPRESSURE	SATURATED STEAM GASES			10			
	LIQUIDS			25			

OPEN AND CLOSED PRESSURES IN % OF SET PRESSURE

FLUID	PRESSURE [bar]	OPENING PRESSURE	CLOSING PRESSURE
SATURATED STEAM	< 43,51	+ 5 %	- 4,35 psi
	≥ 43,51	+ 5 %	- 10 %
LIQUIDS	< 43,51	+ 10 %	- 8,70 psi
	≥ 43,51	+ 10 %	- 20 %

- (1) If external backpressure exists, the AP and CP model cannot be used.
 (2) With external constant backpressure, the spring is adjusted deducting the backpressure from the set pressure.
 (3) If the set pressure < 43,51 bar we must consider the total atmospheric pressure (14,50 psi) as external constant backpressure being freely released.
 If $p_a > 0,25p_s$, we must limit plug speed with the consequent reduction of the kd coefficient of discharge.
 With the new reduced coefficient we determine the d₀, in order to remove the necessary volume.

p_a = Backpressure permitted [bar] absolute.

p_s = Set pressure [bar] absolute.

α_d = Coefficient of discharge.

Center to face dimensions according API-526.
 *Dimensions corresponding to 300x150 lbs.

SET PRESSURES AND REGULATING RANGES												
NPS ₁ x NPS ₂			1"x 2"	1 1/2" x 2"	1 1/2" x 2 1/2"	1 1/2" x 3" (2"x3")	2"x 3" (3"x4")	3"x 4" (4"x6")	4"x 6"	4"x 6"	6"x 8"	8"x10"
API Orifice Letter			D-E	F	G	H	J	L	N	P	Q	T
SET PRESSURES [psi]	MAXIMUM (LIQUIDS AND GASES)	150 lbs	284,27	284,27	284,27	284,27	284,27	284,27	284,27	284,27	145,04	116,03
		300 lbs	580,15	580,15	580,15	464,12	464,12	464,12	362,59	290,08	145,04	116,03
	MAXIMUM (SATURATED STEAM)	150 lbs	147,94	147,94	147,94	147,94	147,94	147,94	147,94	147,94	145,04	116,03
		300 lbs	464,12	464,12	435,11	348,09	319,08	348,09	290,08	261,07	145,04	116,03
	MINIMUM	STEAM AND GASES	7,25	7,25	7,25	7,25	7,25	7,25	7,25	7,25	7,25	7,25
		LIQUIDS	2,90	2,90	2,90	2,90	2,90	2,90	2,90	2,90	2,90	2,90
	2,90 to 9,86	CODE	56210 56390	56226 56406	56242 56422	56258 56438	56273 56453	56288 56468	56303 56483	56317 56497	56511	56521
	9,57 to 14,50	CODE	56211 56391	56227 56407	56243 56423	56259 56439	56274 56454	56289 56469	56304 56484	56318	56512	56522
	13,78 to 20,31	CODE	56212 56392	56228 56408	56244 56424	56260 56440	56275 56455	56290 56470	56305 56485	56319	56513	56523
	18,85 to 27,56	CODE	56213 56393	56229 56409	56245 56425	56261 56441	56276 56456	56291 56471	56306 56486	56320	56514	56524
	26,11 to 37,71	CODE	56214 56394	56230 56410	56246 56426	56262 56442	56277 56457	56292 56472	56307	56321	56515	56525
SPRING REGULATING RANGE [psi]	36,26 to 52,21	CODE	56215 56395	56231 56411	56247 56427	56263 56443	56278 56458	56293 56473	56308	56322	56516	56526
	50,76 to 72,52	CODE	56216 56396	56232 56412	56248 56428	56264 56444	56279 56459	56294	56309	56323	56517	56527
	69,62 to 91,37	CODE	56217 56397	56233 56413	56249 56429	56265 56445	56280 56460	56295	56310	56324	56518	56528
	87,02 to 116,03	CODE	56218 56398	56234 56414	56250 56430	56266 56446	56281 56461	56296	56311	56325	56519	56529
	108,78 to 145,04	CODE	56219 56399	56235 56415	56251 56431	56267 56447	56282 56462	56297	56312	56326	56520	
	137,79 to 181,30	CODE	56220 56400	56236 56416	56252 56432	56268 56448	56283	56298	56313	56327		
	174,05 to 232,06	CODE	56221 56401	56237 56417	56253 56433	56269 56449	56284	56299	56314	56328		
	217,56 to 290,08	CODE	56222 56402	56238 56418	56254 56434	56270	56285	56300	56315	56329		
	261,07 to 362,59	CODE	56223 56403	56239 56419	56255 56435	56271	56286	56301	56316			
	333,59 to 464,12	CODE	56224 56404	56240 56420	56256 56436	56272	56287	56302				
	435,11 to 580,15	CODE	56225 56405	56241 56421	56257 56437							



— Spring steel (ASTM A228). Maximum temperature for EP, ES and CP 482 °F / AP 752 °F.

— Vanadium-chrome steel (AISI 6150).

— Stainless steel (AISI 301).

ASME code only applies to setted safety valves at ≥15 psi or above.

COEFFICIENT OF DISCHARGE										
NPS ₁ x NPS ₂	1" x 2"	1 1/2" x 2"	1 1/2" x 2 1/2"	2" x 3"	3" x 4"	4" x 6"	4" x 6"	6" x 8"	8" x 10"	
API Orifice Letter	D-E	F	G	H	J	L	N	P	Q	T
do	0,63	0,79	0,98	1,26	1,57	1,97	2,48	3,03	4,33	6,10
h	0,28	0,35	0,47	0,47	0,71	0,71	0,79	1,14	1,45	2,21
h1	0,10	0,13	0,16	0,20	0,26	0,31	0,39	0,49	0,78	1,10
h/do	0,017	0,018	0,019	0,015	0,018	0,014	0,012	0,015	0,013	0,014
h1/do (1)	0,006	0,006	0,006	0,006	0,006	0,006	0,006	0,006	0,007	0,007
COEFFICIENT OF DISCHARGE kd	SATURATED STEAM GASES				0,78				0,74	
	LIQUIDS				0,60				0,52	
	LIQUIDS WITH RAPID LIMITER (1)				0,36					

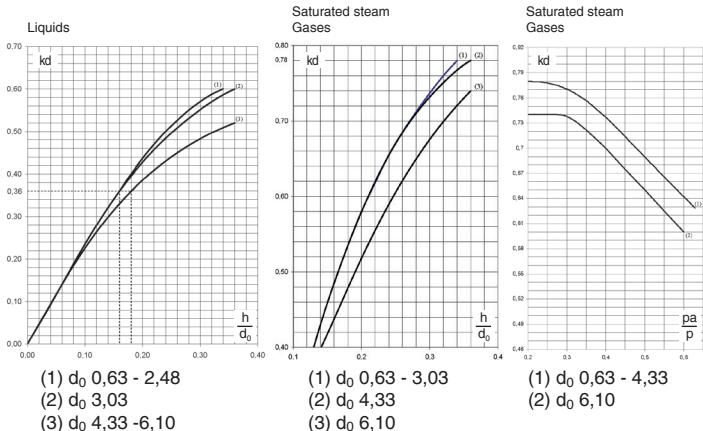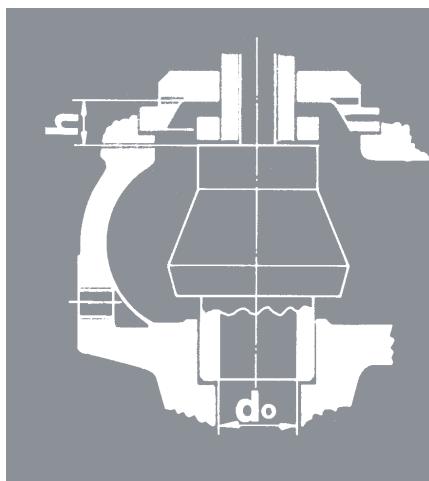

NPS ₁ x NPS ₂	1" x 2"	1 1/2" x 2"	1 1/2" x 2 1/2"
API Orifice Letter	D-E	F	G
do	0,63	0,79	0,98
$Ao = \frac{\pi \cdot do^2}{4}$	0,31	0,49	0,76
SET PRESSURE [psi]	I	II	III
	I	II	III

Calculated discharge capacities at set pressure +10% overpressure.

Discharge capacities at 30 psi and below are calculated at set pressure + 3 psi of overpressure.

DISCHARGE CAPACITY

For other, not so dense liquids, other than water at 70 °F apply:

$$V_L = \sqrt{\frac{Q_A}{Q_L}} \cdot V_A \text{ OU } V_A = V_L \cdot \sqrt{\frac{Q_L}{Q_A}}$$

V_A = Water flow according to table.

V_L = Liquid flow.

ρ_A = Water density at 70 °F.
 $(\rho_A = 62.4 \text{ lb/in}^3)$

($\rho_A = 0,04 \text{ lb/in}^3$)

ρ_L = Liquid density.

FACT LIST FOR SAFETY VALVE CALCULS				Customer: Theme: Leaf: Of:					
Calculus according to ASME code section VIII Div.1									
1 Consultation / Bid / Order									
2 Position N°.									
3 N°. of units									
4 Regulation									
SERVICE CONDITIONS									
5 Fluid									
6 Calculation temperature		°F							
7 State at moment of dischar. l = liquid, s = steam, g = gas			<input type="checkbox"/> l	<input type="checkbox"/> s	<input type="checkbox"/> g	<input type="checkbox"/> l	<input type="checkbox"/> s	<input type="checkbox"/> g	
8 Molecular mass		lb/lbmol							
9 Adiabatic exponent æ		Compressibility coe. Z							
10 Density at moment of discharge		lb/in³							
11 Coefficients ψ max		χ							
12 Viscosity	in²/s	lbf s/in²							
13 Working pressure abs.		psi							
14 Set pressure abs.		psi							
15 External back pressure abs.									
	constant	variable							
16 Rated pressure abs.		psi							
17 Discharge capacity	Required: lb/h, [S.C.F.M.], US - G.P.M								
18	Possible: 1) lb/h, [S.C.F.M.], US - G.P.M								
VALVE CONSTRUCTION									
19 Opening: Full lift / Normal / Progressive									
20 Manufacturer type									
Materials		Body							
		Seat							
		Plug							
		Spring							
		Joint							
26 Manual discharge action		yes / no							
27 Cover		Closed / Open							
28 Bellows		yes / no							
29 Body with drainage		yes / no							
30 Diameter of narrowest flow	do	inch							
31	Section of narrowest flow A ₀	Necessary A ₀	inch ²						
32		Chosen A ₀	inch ²						
33	Allowed discharge coefficient		kd						
34	Input / Output	NPS	Flange	inch					
35			Thread	inch NPT					
36			Welding (soldering) ends						
37		Class							
38	Shape of joint surfaces (ASME/ANSI B16.5-2009)								
39	OBSERVA-TIONS	Unit weight			approx. lb				
40									
41									
42									
43	ACCEP-TANCE	Certificate according to EN-10204 2.2							
44		Certificate according to EN-10204 3.2							
45									
Date: _____									
Department: _____									
Name: _____									